

211 North Lindbergh Blvd.  
 St. Louis, MO 63141  
 888.535.5005 tel  
 314.754.0835 fax  
 specify@anovafurnishings.com  
 anovafurnishings.com



**D1007  
 PICNIC TABLE**  
**8' perforated metal picnic table,  
 ADA compliant, traditional edge,  
 portable mount**

**Material**

The table is 96.25" in length and features two flat bench seats. Table top and seats are 12-gauge perforated steel with a .62" diameter uniform hole pattern and feature a traditional edge. Table top and seats are protected by Fusion Advantage™, a plastisol coating with an average .125" thickness and a high-gloss powder coat.

The table top extends 27.17" from the frame on one side, allowing for wheelchair access and is ADA compliant. The table top is designed to support 100 lbs per square foot and the seats will support 200 lbs per linear foot.

The frames are made of 2.38" O.D. steel tubing protected by a fade resistant powder coat finish featuring a state of the art primer proven to prevent rusting. The frame is portable in design allowing for flexibility in placement.

**Finish**

Fusion Advantage is a heat fused plastisol coating that creates an impervious rustproof barrier and resists UV deterioration, mildew, staining and fading.

The finish has been tested to the requirements of ASTM E1354 and is determined to be in compliance with California Uniform Fire Code 1103.2.1.4.2.

A state of the art primer is applied to all of the under supports, providing extreme rust fighting protection and durability. Treated components exceed the industry standard by 34% in testing by independent sources.

**Color**

This product is available in the following vibrant colors: Black, Blue, Bronze, Brown, Burgundy, Camel, Charcoal, Evergreen, Gray, Navy, Orange, Purple, Red, Sage, Silver, Teal, Vanilla, White, and Yellow.

**Assembly**



Table requires some assembly. Stainless steel assembly hardware is included.

**Maintenance**

The product is virtually maintenance-free and requires only periodic cleaning with a sponge and a solution of mild detergent and water to remove surface dirt. Do not clean with solvent or petroleum based products.

**Warranty**

20-year limited structural warranty with 7-year finish warranty from the date of purchase.

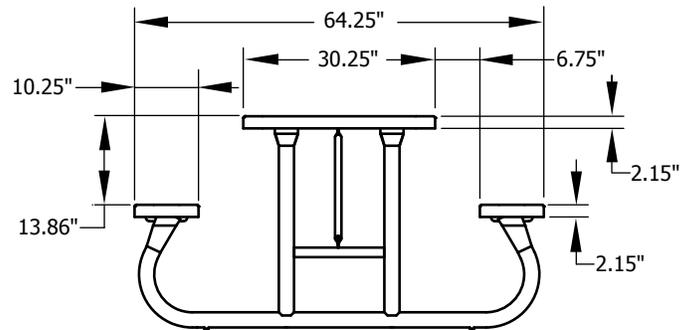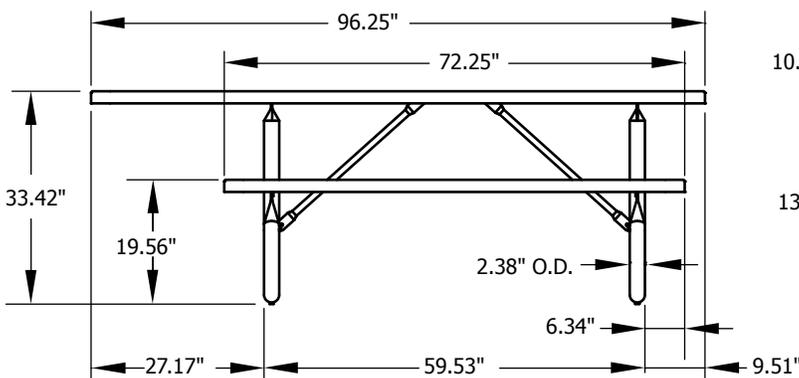

**Shipping Information**

Unit Wt.	Unit Shipping Wt. UPS	Unit Shipping Wt. Truck (1+ Units)	Unit Ship Size w/Pallet	Max Units per Pallet	Pallet Wt. (98" x 32")	Total No. Pkgs	Shipping Class
350 lbs	N/A	368 lbs/unit	28 cu. ft.	5	100 lbs	3	70



**anovafurnishings.com**  
888.535.5005 tel

# ASSEMBLY INSTRUCTIONS

<b>D2003</b>	Picnic Table	<b>L1350</b>	Picnic Table
<b>D2003COM</b>	Picnic Table	<b>L2003</b>	Picnic Table
<b>D2005</b>	Picnic Table	<b>D1007</b>	ADA Picnic Table
<b>D2006</b>	Picnic Table	<b>D1105</b>	ADA Picnic Table
<b>D2012</b>	Picnic Table	<b>F1038</b>	ADA Picnic Table
<b>D2013</b>	Picnic Table	<b>F1105</b>	ADA Picnic Table
<b>D2014</b>	Picnic Table	<b>F3052</b>	ADA Picnic Table
<b>F1149</b>	Picnic Table		
<b>F1181</b>	Picnic Table		
<b>F2003</b>	Picnic Table		
<b>F2012</b>	Picnic Table		
<b>F2014</b>	Picnic Table		
<b>F3053</b>	Picnic Table		




## TOOLS NEEDED:

- 1/2" Open-end or Box-end Wrench
- Ratchet with 1/2" Socket
- Level
- Rubber Mallet

## ASSEMBLY HARDWARE:



## BENCH COMPONENTS:

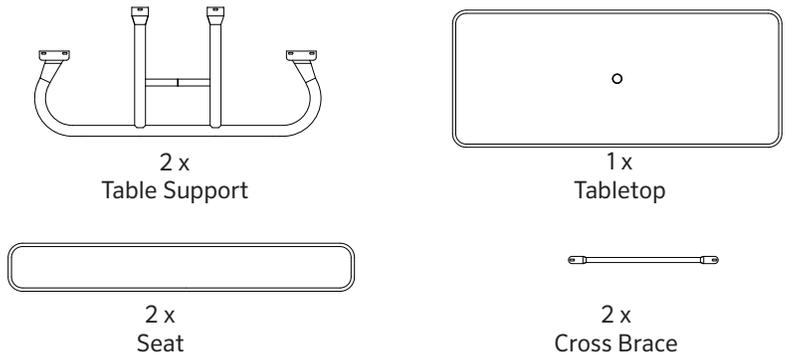

## ASSEMBLY:

The assembly is a two-person operation.

1. Inspect the shipping container contents for damage and to determine that all components and hardware are present.
2. Place the Tabletop upside down on the shipping packaging or other soft surface to avoid scratching the product. Locate one of the Supports and position it near the end of the Tabletop.

3. Align the mounting holes in the Support with the holes in the bracket on one end of the Tabletop. Install a Washer onto one of the provided Bolts and insert the Bolt through one of the mounting holes in both parts, with the Bolt head on the outside surface of the Support. Install a Washer and Flanged Nut on the inside end of the Bolt.

**NOTE:** Installing the Bolt in this direction reduces the risk of scratching during use.



Leave the hardware finger tight so that adjustments can be made during assembly and leveling.

Install a Bolt and Washer through the other mounting hole in the Support and Tabletop bracket, and install a Washer and Flanged Nut. Again, leave the hardware finger tight.

4. Position the remaining support near the other end of the Tabletop.

Align the mounting holes in the Support with the holes in the bracket on the end of the Tabletop. Install a Washer onto a Bolt and insert the Bolt through one of the mounting holes in both parts, with the Bolt head on the outside surface of the Support.


Install a Washer and Flanged Nut on the inside end of the Bolt. Leave the hardware finger tight.

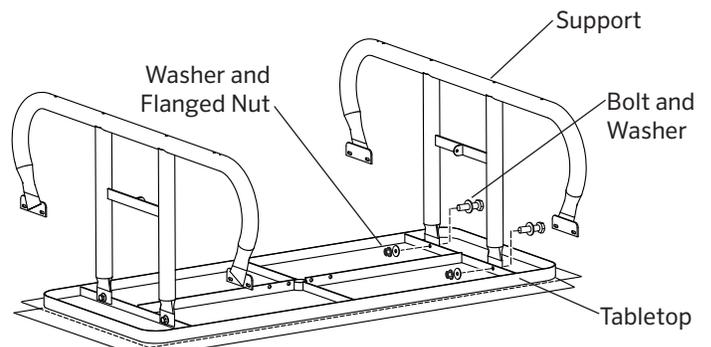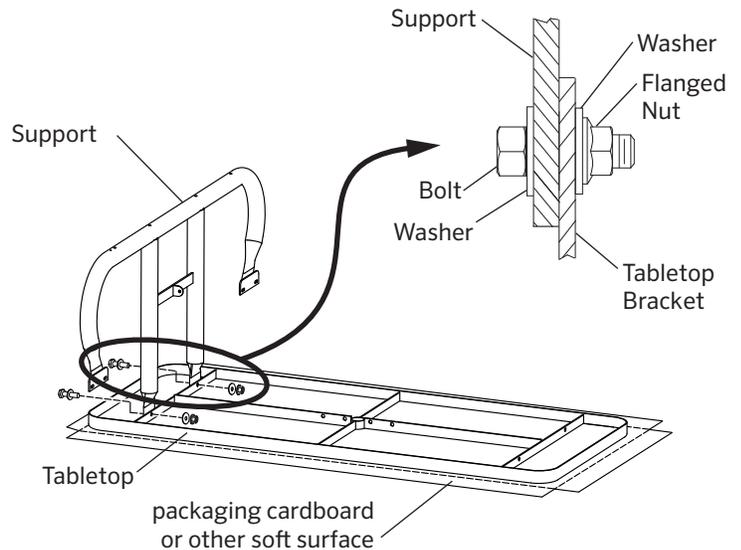


5. Locate the four Rubber Feet and place them in the outermost holes on the bottom of the supports. Use the Rubber Mallet to set the Feet into place.

6. Locate one of the Cross Braces and position it so that the mounting hole in one end aligns with the mounting hole in the bracket in the center of the Support. Put a Washer on one of the Bolts and insert the Bolt through the Cross Brace and Support Bracket and put a Washer and Flanged Nut on the end of the Bolt. Leave the hardware finger tight so that adjustments can be made while assembling and leveling.

Position the other end of the Cross Brace so the mounting hole aligns with the hole closest to the center of the Tabletop Bracket. Install a Bolt and Washer through the Cross Brace and the Tabletop Bracket and install a Washer and Flanged Nut on the end of the Bolt. Again, leave the hardware finger tight.

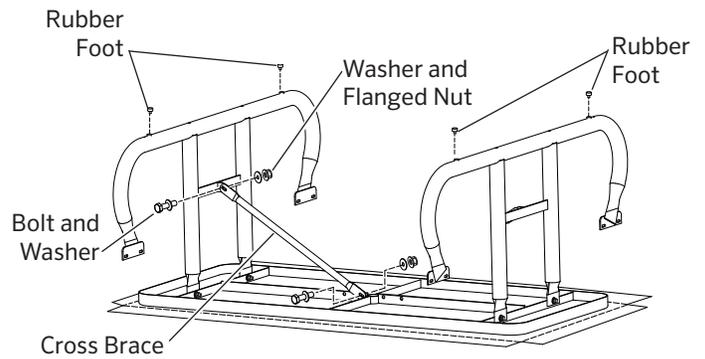


7. Attach the other Cross Brace to the Tabletop and other Support Bracket in the same manner. Leave the hardware finger tight.

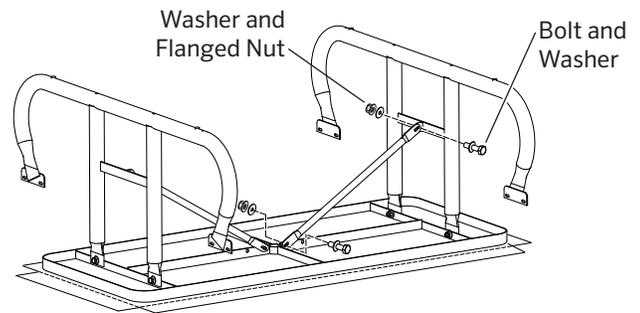

8. Locate one of the Seats and position it up to the Support Seat Brackets. Line up the mounting holes in the Seat with the mounting holes in the Support Seat Bracket. Insert a Bolt with Washer through the each of the sets of mounting holes and tighten finger tight.


Repeat this step for the Seat on the other side of the Table.

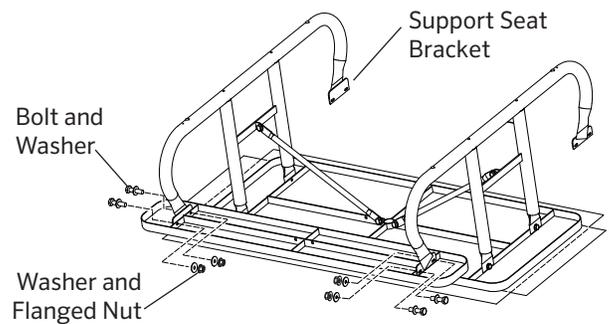

9. Turn the table right side up and tighten all hardware while checking with a Level.

10. Move the assembled Table to the desired location.

11. Retighten hardware two weeks after initial assembly.

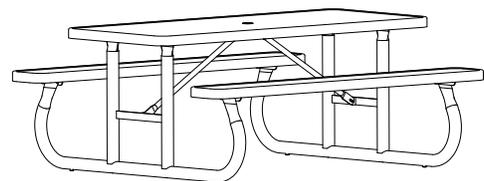

**WARNING**

- Furniture must not be used other than for its intended purpose and should be inspected regularly for loose, missing, or broken hardware, and general instability.
- Furniture that is damaged or appears to be unstable must be removed from service and be repaired or replaced.
- Repairs must be made using only factory authorized parts and methods.

**CARE AND MAINTENANCE**

- Do not drag the assembled unit across any surface.
- This product requires only periodic cleaning with a sponge and a solution of mild detergent and water to remove surface dirt. Do not clean with a solvent or petroleum based products.



211 North Lindbergh Blvd.  
St. Louis, MO 63141

tel: 888.535.5005  
web: [anovafurnishings.com](http://anovafurnishings.com)